

Tube Warmer TW37

User Manual



origio

Table of Contents

1. General information	3
2. Product overview	4
3. Unpacking the Tube Warmer TW37	5
4. Attention	5
5. Accessories	6
5.1 Standard accessories	6
5.2 Optional equipment	6
6. User Manual	7
6.1 Definition of use	7
6.2 General description	7
6.3 Construction of the Tube Warmer TW37	8
6.4 Placing instruments	8
6.5 Power supply	8
6.6 Start up.	9
7. User maintenance	10
7.1 Cleaning	10
7.2 Technical support and guarantee	10
8. Changing the Set point	11
9. Calibration	11
9.1 Temperature calibration	12
9.2 Re-Enter Password protection	13
9.3 Auto Tune procedure	13
10. Standard settings Value Parameters	14
11. Technical data	15
11.1 Dimensions	15
11.2 Power Supply.	15

1. General information

COPYRIGHT

This manual contains information that is subject to copyright. All rights reserved. This manual should not be photocopied, otherwise copied or distributed, completely or in part, without the approval of ORIGIO a/s.

Users of ORIGIO's products should not hesitate to contact us if there are any errors, unclear points or ambiguities in this manual.


ORIGIO a/s
Knardrupvej 2
2760 Måløv
Denmark

Tel.: +45 46 79 02 00
Fax: +45 46 79 03 00
Internet: www.origio.com

Document No:	User Man_TW37
Version no:	Version 2
Date:	March 2014

This instrument is constructed to comply with IEC requirements.

2. Product overview

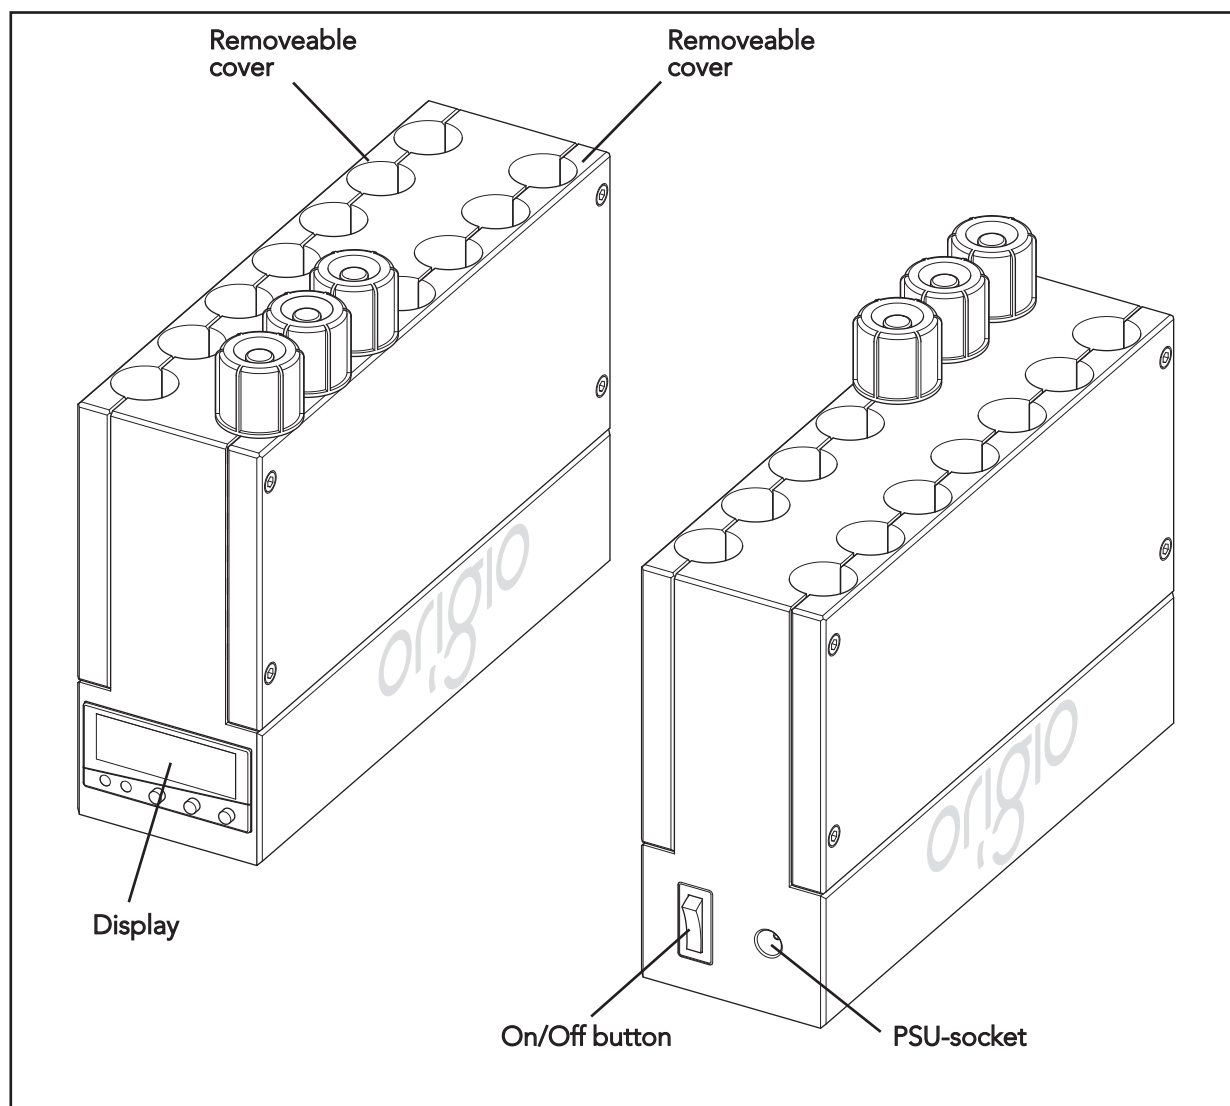

Authorize tubes to use are:

14 ml round bottom tube

15 ml round bottom tube




3. Unpacking the Tube Warmer TW37

- Unpack the equipment.
- Check the packing list to ensure all accessories are there.
- Examine the packing material carefully for separately packed items.
- Check the Tube Warmer TW37 for external surface damage.
- Check that the display is not broken or damaged.




4. Attention

Do NOT carry the Tube Warmer TW37 by the polycarbonate side panels

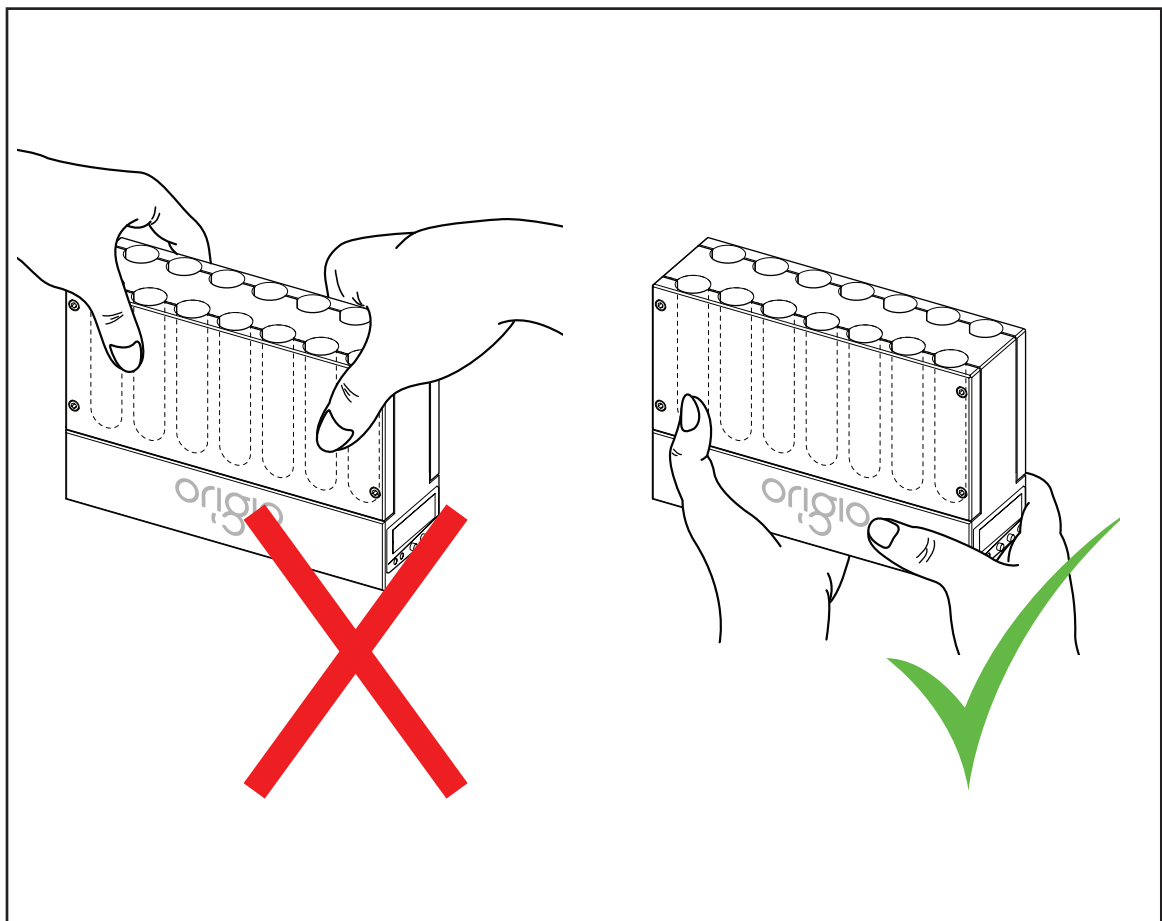

5. Accessories

5.1 Standard accessories
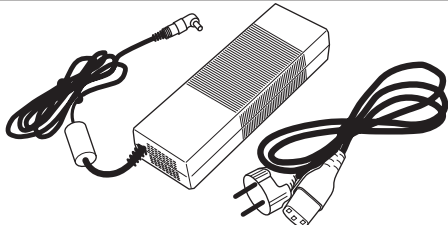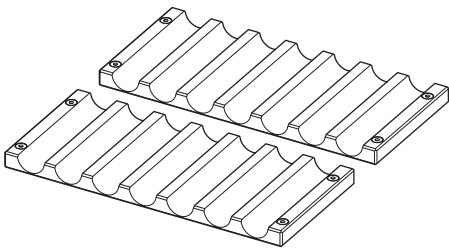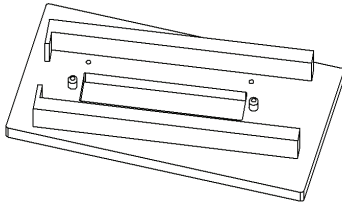
<p>24 volts main adapter (PSU) and mains cable</p> <p>Item number: 9001701802</p>	
<p>Side panels</p> <p>Item number: 9001701803 (2 off)</p>	
<p>Tube Warmer Stand</p> <p>Item number: 9001701805</p>	


6. User Manual

6.1 Definition of use


The Tube Warmer TW37 is designed to warm up and maintain test tubes at a constant temperature.

6.2 General description


The unit is able to hold up to 14 test tubes, type 14 ml or 15 ml round bottom tubes, 7 on each side. Sterile test tubes are placed in one of the 14 slots on the unit to maintain a constant temperature or to warm up with the unit.

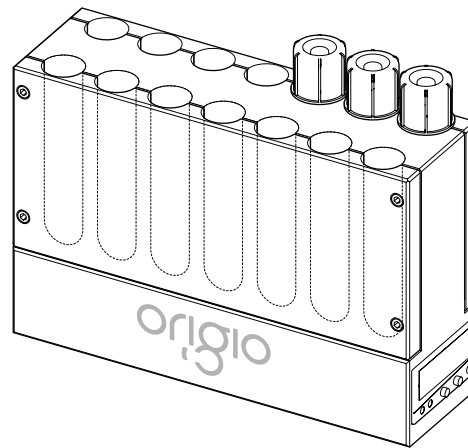

The 4 character green LED display will indicate the current temperature of the Tube Warmer TW37. Adjustments to the temperature can be made using the up and down arrow keys.

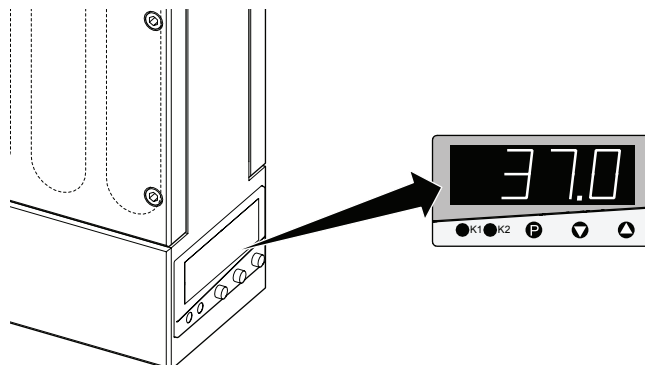

The sides of the Tube Warmer TW37 can be removed for sterilising and general cleaning.

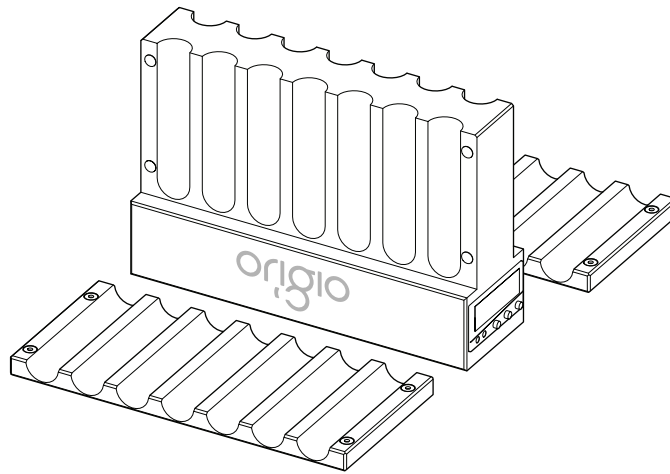

6.3 Construction of the Tube Warmer TW37

The unit is constructed of an anodised Aluminium casing containing the internal control, power input and heating system for the tubes.

A removable polycarbonate front on either side of the unit ensures that the tube remain in place whilst in use. The unit must be connected to mains power, for normal operation mode.

The casing design is also made to retain and maintain the heat to an even level and avoid high fluctuations in temperature.

Two polycarbonate front panels are magnetically fixed to the front, for visual indication of filled tubes and removable for ease of cleaning.

6.4 Placing instruments

Place the Tube Warmer TW37 on a flat surface, away from heat and direct sunlight.


6.5 Power supply

Put the power supply in connector on the back of the Tube Warmer TW37. Then connect the power supply to power mains.


Note *Use only the power cord supplied with the Tube Warmer TW37, un-approved power supplies may damage the unit and invalidate the warranty.*

6.6 Start up

Press on/off button on the back of the Tube Warmer TW37.

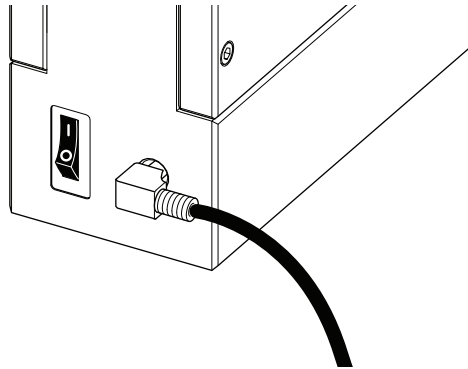

The display and lights K1 (led) and K2 (led) will start flashing, after 3 seconds the actual temperature will appear on the display. At this point the Tube Warmer TW37 will automatically begin to warm up to the set point temperature. This is indicated by the led K2 flashing.

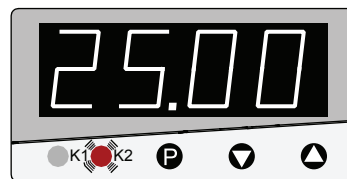

The temperature will reach 36-37° degrees within 8 minutes, but true stabilisation of the temperature will take approximately 60 minutes. When the temperature is stabilised, the Tube Warmer TW37 is ready for use.

Caution *It is important at this point that none of the settings should be changed.*

Note *After each use, remove the power supply from the connection at the rear side.*

7. User maintenance

7.1 Cleaning

Main body of Tube Warmer TW37 is to be cleaned with soft lint free cloth soaked with hot water. (add mildly acidic, neutral or mildly alkaline detergents, if necessary).

<i>Caution</i>	<i>Do not use any abrasive cleaning agents or high pressure cleaners and DO NOT autoclave</i>
----------------	---

<i>Note</i>	<i>The Tube Warmer TW37 has limited resistance to organic solvents (eg. Sprits, benzol etc..)</i>
-------------	---

The Polycarbonate removable side panels are to be cleaned with approved (for IVF) cleaning and decontamination material, but not abrasive cleaning material.

<i>Caution</i>	<i>The Polycarbonate side panels can NOT be Autoclaved</i>
----------------	--

7.2 Technical support and guarantee






In case of malfunction contact ORIGIO customer support for service support.

<i>Caution</i>	<i>Do not open the Tube Warmer TW37 or remove the identification label, this will invalidate the guarantee.</i>
----------------	---

<i>Note</i>	<i>The Tube Warmer TW37 is guaranteed for 24 month from the date of purchase.</i>
-------------	---

8. Changing the Set point

Ensure the unit is switched on and the current temperature is indicated on the display.

Action	Button	Display
Press		
Programmed temperature ie. 36.5		
To change Values press	 	Changes to value required
To save exit press buttons	 	Current temperature ie 37.0





Note When in the settings menu if a button is not pressed within 5 sec. the menu will jump back to the normal operational display (with temp. 37.0)













9. Calibration

To Calibrate the Tube Warmer TW37 it is important to put in the password to enable critical data change.









9.1 Temperature calibration

The following steps are followed for temperature calibration.

Action	Button	Display
Press and hold for 5 seconds (Display will flash between)		
Press slowly 6 times and go to (Display will flash between)		

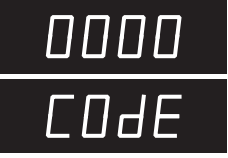Wait and press to five second		
Appears at display		
Press several time turnover parameter and go to (Display will flash between		
By using arrow up and down type in new off set value	 	
This value must flash once before you exit as this confirm the value is set into memory		
Press (Back to normal display mode ie. 37.0)	 	

9.3 Re-Enter Password protection







Action	Button	Display
Press and hold for 5 seconds (Display will flash between)	 	
By using arrow up and down type in new off set value	 	
Confirm by pressing (Back to normal display mode ie. 37.0))		
The unit is now return to the normal display		

9.4 Auto Tune procedure

This procedure is only used when the Tube Warmer TW37 is first powered up from cold.



This is tuning of the unit to the ambient temperature. It is the amount of current (Amps) required to reach set point based on the room temperature - this is to be done when unpacked from new.

Externally (with another thermometer) measure the temperature of the unit and follow the Auto tune procedure below.

Action	Button	Display
Press and hold for 5 seconds	 	
To exit press (Back to normal display mode ie. 37.0))	 	
The unit is now return to the normal display		

10. Standard settings Value Parameters

This information is only for setting up the controller should it have to be reset due to failure, the data is not for general user setting.

Display Text	Value Number
Pb	0.3
DT	4
RT	19
CY.1	4.0
HIS	1.0
Y.0	0
Y1	100
Y2	-100
DF	1.4
C111	005
C112	1
C113	10
C114	7
C115	0
C116	0
C117	0
C118	3
C120	0
SPL	0 min temp limit
SPH	50 max temp limit
OFF.S	-2.5
AL	999.9
HIST	1
TUNE	  2 seconds

11. Technical data

11.1 Dimensions

Tube Warmer TW37 external dimensions	Height 119 mm - Width 52 mm - Length 174 mm
Tube Warmer TW37 - Weight	1.5 kg
Tubes	Height 95 mm - Diameter 18 mm
Power Supply cable length - to Tube Warmer TW37	1600 mm approximate
Power Supply cable length - to External	1900 mm approximate

11.2 Power Supply

The unit is supplied with a Switch mode regulated power supply.

AC input:	100-240 V AC 50/60 Hz
DC output: 7 output selections:	15/16 V DC 8.5 A 18/19 V DC 8 A 20 V DC 7.5 A 22 V DC 6.5 A 24 V DC 6 A